Remedial Wall Tie – Dry installation

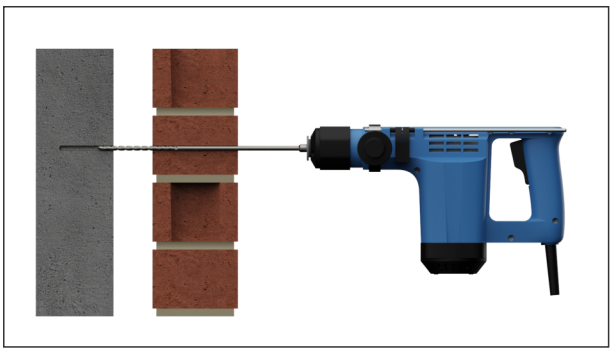

Drill Pilot Holes:

- Determine tie pattern (e.g., staggered, 450-900mm horizontal, 450-750mm vertical).
- Use a service detector to avoid any services.
- Mark installation points.
- Drill holes (between 5mm - 7mm) through outer leaf, across cavity, and 50-70mm into inner leaf.

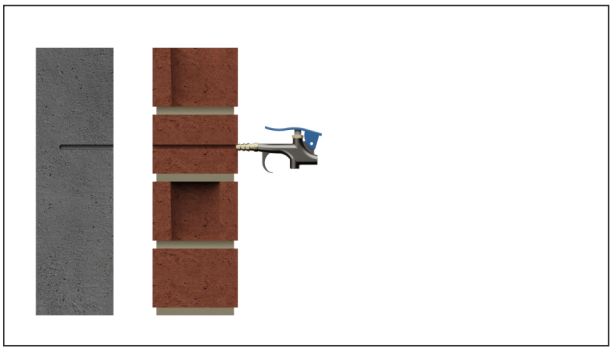

Clean Holes:

Clean holes thoroughly with compressed air or brush.

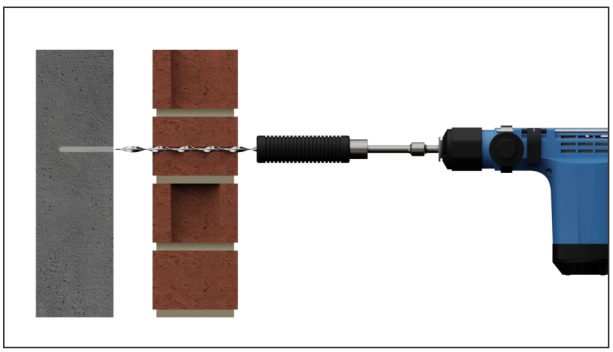

Drive in Tie:

Insert RWT1 tie into installation tool.
Drive tie into pilot hole using rotary hammer drill (hammer only mode) to specified depth (50-70mm embedment per leaf)

Installation