Remedial Wall Tie – Wet installation (epoxy)

Publication date
April 2025 · v1.01

Installation

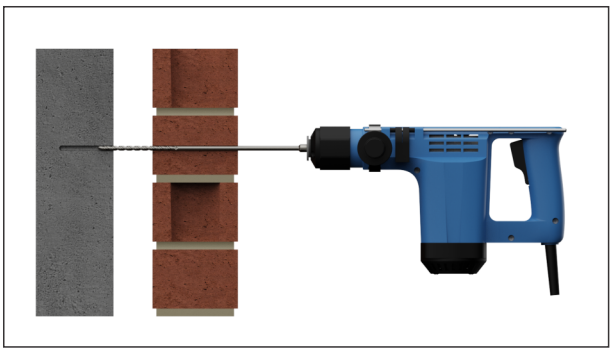

Drill Pilot Holes:

- Determine tie pattern (e.g., staggered, 450-900mm horizontal, 450-750mm vertical).
- Use a service detector to avoid any services.
- Mark installation points.
- Drill 10mm holes through outer leaf, across cavity, and 50-70mm into inner leaf.

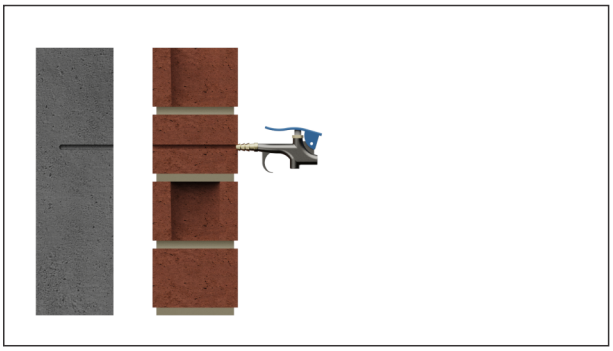

Clean Holes:

Clean holes thoroughly with compressed air or brush.

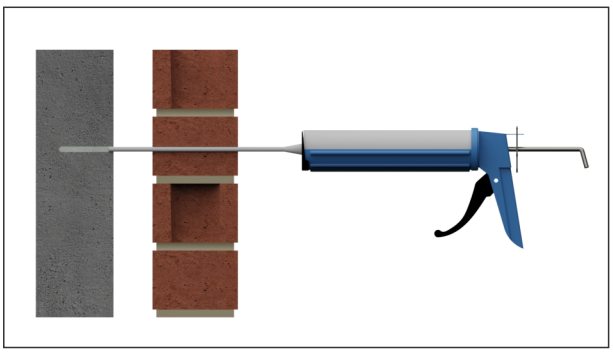

Epoxy Rear Leaf:

Inject resin into rear leaf pilot hole per manufacturer's instructions.

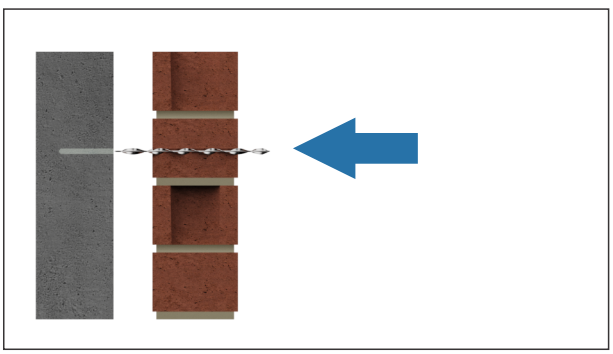

Push in Tie:

Insert RWT1 tie into hole to specified depth (50-70mm embedment per leaf)

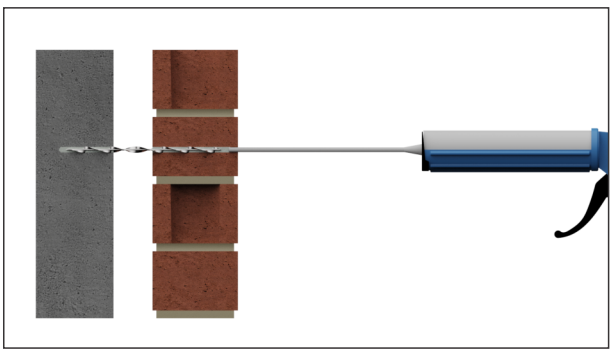

Epoxy Front Leaf:

Inject resin into front leaf pilot hole until the hole is filled.